

НАЗНАЧЕНИЕ КОНТАКТОВ

X1		X2		X3		X4	
1	SE5	1	+24 В	1	+DS	1	C0
2	SE4	2	+24 В	2	-DS	2	C1
3	ДБ1	3	0V	3	+KPR	3	C2
4	ДБ2	4	0V	4	-KPR	4	C3
5	SB	5	SA	5	SDOUT	5	C4
6	СТОП – М	6	PEB.B	6	SDIN	6	C5
7	ИскательНапр	7	PEB.H	7	SCOUT	7	C6
8	TF	8	PEB.B-H	8	SW+	8	C7
9	~24 В	9	ПОЖ1	9	SW-	9	D0
10	~110 В	10	ПОЖ2	10	RxD	10	D1
11	N	11	SQ1	11	TxD	11	D2
12	N	12	SQ2	12	PAIR	12	D3
13	N	13	SQ3	13	K0	13	D4
14	СТОП – К	14	SQ4	14	K1	14	D6
15	HA1 (звонок)	15	WKO	15	K2	15	D7
16	L331	16	WKZ	16	K3	16	
17	DISP1	17	WBR	17	K4	17	1DTA
18	DISP2	18	RT0	18	K5	18	1RTX
19	SQ+	19	RT1	19	1TxD	19	1CTS
20	SQ-	20	RT2	20	1RxD	20	1DSR

X12.1				X12.2					
1	2	3	4	5	6	7	8	9	10
L11	L21	L31	N	6C1	18C1	6C2	18C2	6C3	18C3
Входные фазы				Фазы главного привода					

U _{вых.} = 220В									
X13									
1	2	3	4	5	6	7	8	9	10
L161	L160	C3	C2	C1	OCB1	OCB2	L19	L29	L39
Тормоз		Привод дверей			Освещение		Привод вентилятора		

